


Mitel 6915 IP Phone - Quick Reference Guide

Getting started

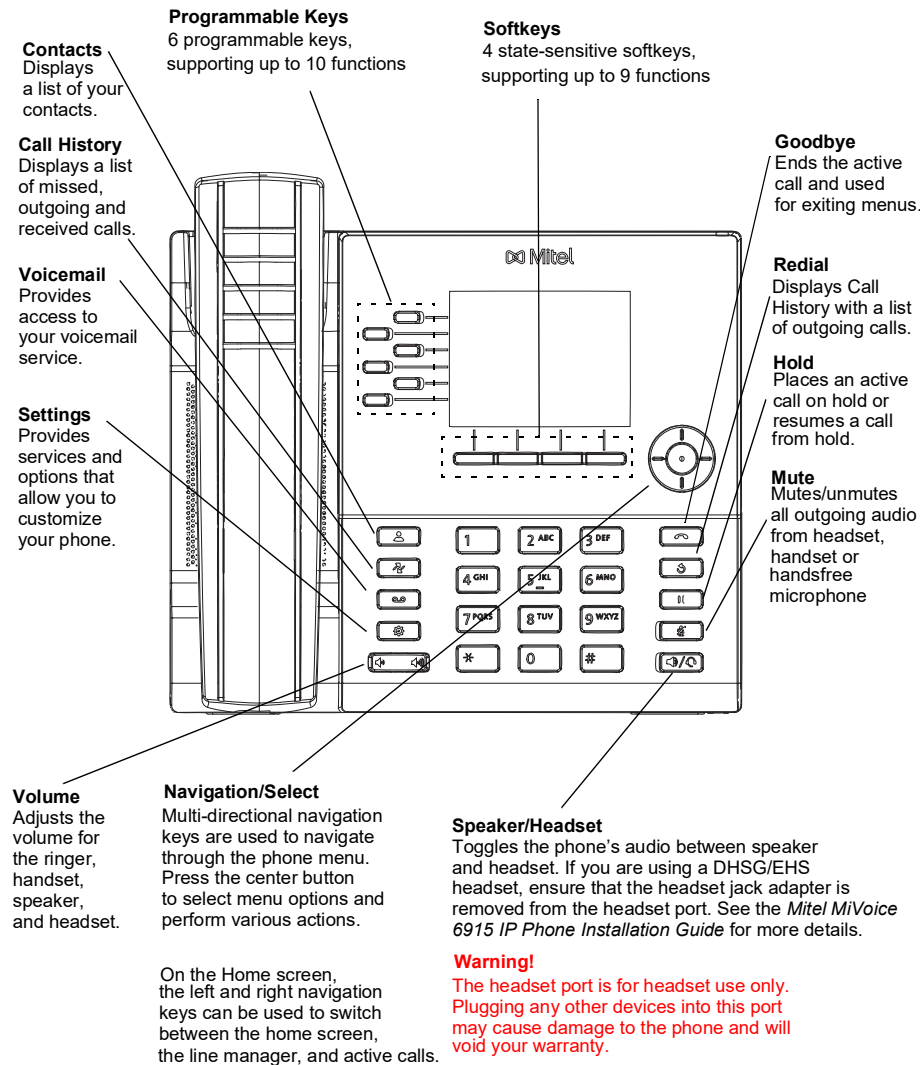

Basic call handling

Making a call

1. Lift the handset or press the key, and dial the number.
2. Press a preprogrammed Line key and dial the number.

Ending a call

Place the handset back in its cradle, press the **End Call** softkey, or press the key.

Answering a call

Lift the handset or press the key for handsfree operation.

Redialing

Press the **Redial** softkey once or the key twice to call the last dialed number as displayed on the Home screen.

or

Press the once to access the Call History application with a list of recently dialed numbers. Use the up and down navigation keys to scroll through the entries and either press the **Select** button or **Dial** softkey to redial the selected number.

Muting or unmuting a call

Press the key while on an active call to mute the microphone for your handset, headset, or speakerphone. Press the key again to unmute the audio.

Holding and resuming a call

1. To place an active call on hold, press the key. A (hold) icon flashes on the respective **Line** key.
2. To resume the call, press the key again or press the respective **Line** key.

Note: For details on all the available features and options, refer to the *Mitel 6915 IP Phone User Guide*.




User Interface (UI) overview

Mitel 6915 IP Phone - Quick Reference Guide


Home screen

The Home (default) screen is displayed when the phone is in the idle state. The Home screen displays status indicators, user directory number, avatar, last dialed number, time, date and list of programmable softkeys.

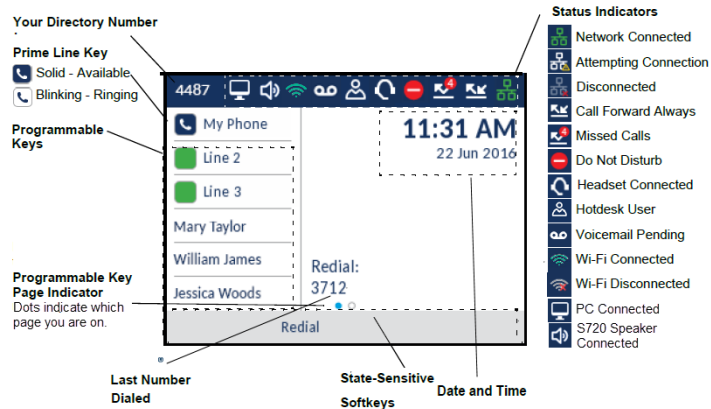

Call screen

When on an active call, caller's avatar, name, number and call duration timer is displayed. The context-sensitive softkeys are updated with applicable call handling features.

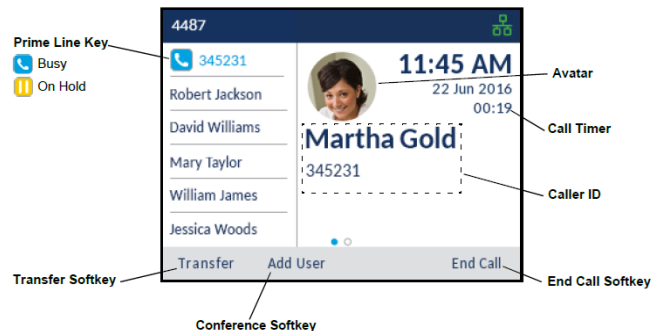


Applications

Contacts

The Contacts application stores personal and corporate directory phone numbers. The Mitel 6915 IP Phone supports a localized Personal directory as well as enhanced

functionality allowing for interoperability with LDAP (corporate) directories.

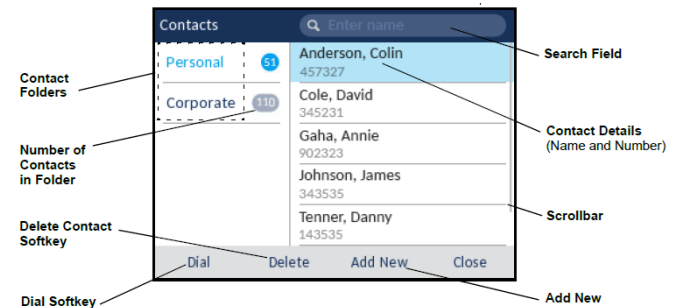


Making a call using the Contacts application

1. Press the key to access the Contacts application.
2. Navigate to the respective contacts folder and scroll through the contacts by using the navigation keys
or
Enter characters using the keypad and press the **Search** softkey to use the search feature.
3. When the applicable contact is highlighted, press the **Select** button or **Dial** softkey to place a call using the entry default phone number.
or
To place a call to a different phone number defined for the entry (for example, a mobile number), press the right navigation key, highlight the phone number you want to call using the up or down navigation keys, and press the **Select** button or the **Dial** softkey.

Call History

The Call History application displays a list of your missed, outgoing and received calls. You can view, delete and dial call history entries as well as copy entries to your Contacts application.

Mitel 6915 IP Phone - Quick Reference Guide

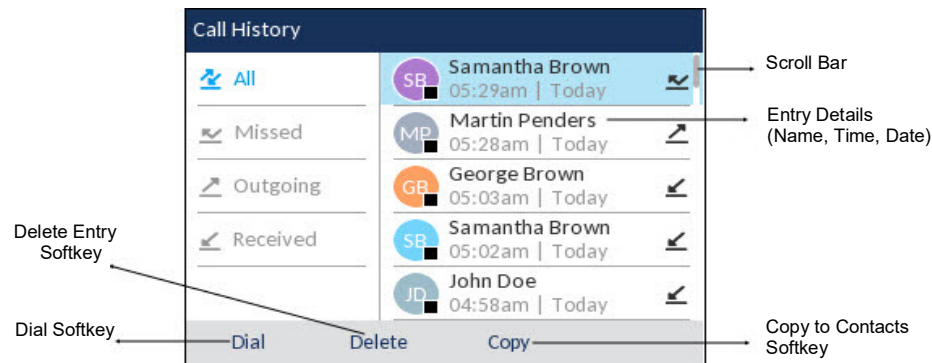

Using the Call History application

1. Press the  key to access the Call History application.
2. Scroll through the lists by using the navigation keys. To view additional details for an entry, press the **Right** navigation key when the entry is highlighted.
3. Press the **Select** button or **Dial** softkey to place a call to the respective entry or
Press the **Copy** softkey to copy the entry to your Contacts application or
Press the **Delete** softkey to delete the entry from your Call History.

Voicemail

When voicemail functionality is enabled, the MWI LED on the Mitel 6915 IP phone flashes red and the  (Voicemail) icon displays on the status bar indicating that voicemail messages are available.

You can access your voicemail service by pressing the **Voicemail**  key.

Note: Voicemail functionality must be configured by your System Administrator.

Advanced call handling

The Mitel 6915 IP Phone provides a method for transferring calls through the **Transfer** softkey.

Call Transferring

1. Ensure you are on active call with the party you wish to transfer.
2. Press the **Transfer** softkey. The active call is placed on hold.
3. Enter the transfer recipient's number and press the **Transfer** softkey.

3-Way Conferencing

1. Ensure you are on active call with one of the contacts with whom you want to create a conference.
2. Press the **Conf** softkey. The active call is placed on hold.
3. Enter the conference target's number and press the **Dial** softkey.
4. Wait for an answer and then press the **Conf** softkey to complete the 3-way conference call.

Speed Dial configuration

A **Speed Dial** key allows you to dial a specified number with one key press. **Speed Dial** keys can be useful as they can be programmed to dial directly to an internal or external number. You can also transfer calls to or create conference calls using your **Speed Dial** keys instead of dialing manually.

Note: Configuring a speed dial key using the press-and-hold method is only available if enabled by your System Administrator.

Configuring a Speed Dial key

1. Press and hold the non-configured softkey, dialpad key, or expansion module key (for approximately 3 seconds) until the **Speed Dial Edit** screen is displayed.
2. In the **Label** field, enter a description to apply to the key.
- Note:** Use the **ABC** softkey to specify uppercase letters or lowercase letters when entering the label.
3. Press the down navigation key to move to the **Number** field and enter the number using the dialpad keys.
4. Press the **Save** softkey to save the speed dial information to the key you selected.